

Cordless Scanner Quick Guide

Notice

- A standard kit contains: a handheld unit, a cradle, a cable, and a quick guide.
- It is suggested to read the user manual in details before use.

Parts of the handheld unit



- ① Scan window
- ② Trigger (Press to trigger / Long press 3 seconds to turn on)
- ③ Beeper
- ④ On Base indicator (Blue LED)
- ⑤ Successful decoding indicator (Green LED) / Communication fail indicator (Red LED) / Charging (Red/Green LED)

Parts of the cradle



- ⑥ Power indicator (Blue LED)
- ⑦ Communication indicator (Green LED)
- ⑧ Key (Long press 10 seconds to restore factory default setting of cradle)

Installation of cradle

1. Refer to the below pictures, connect the host with the scanner with different cables firstly, and then connect the adaptor to the power socket.
2. Ensure that all connections are secure. After a few seconds, if only the blue LED on the cradle is ON, it indicates the cradle is in normal working mode.


Note: If you use the PS/2 keyboard cable, you must restart the device after the connection is successful.



USB cable




RS232 cable

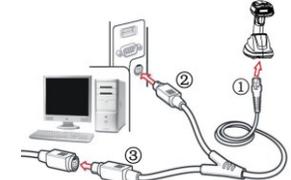

PS/2 keyboard cable

- Please charge the battery before the first time of use. The Red LED on the handheld unit is turned on when the charging is in process. When the charging process completes, the Red LED is turned off, and the Green LED is turned on.
- Charging time: 6 hours for fully charged.
- You can charge the battery via a USB port on the device or an optional 5 VDC adapter.

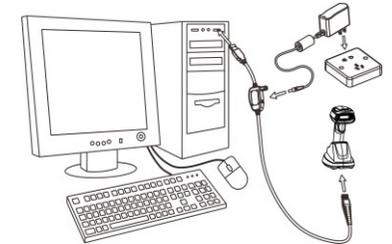

Note: The 5V power adapter is an optional accessory

Indication of handheld unit for wireless data transmission

Successful Transmission	Beeper	Red LED	Vibration
Yes	Off	Off	Off
No	Two long beeps	Blinks 2 times, and then turns off	Short vibrates 2 times, and then turns off

Turn off/on handheld unit

1. If you want to turn off the handheld unit, scan the barcode as shown right.
2. If you want to turn off the handheld unit via trigger key, please press and hold the trigger key, after the laser beam turns off, wait for another 5 seconds, the handheld unit will be turned off, then you can release the trigger key at this moment.
3. If you want to turn on the handheld unit again, please keep the trigger key being pressing for 3 seconds.



Quick setting to wireless network

1. Make sure that both the handheld unit and the cradle are in normal working mode. Normally it means that only the blue LED on the cradle are ON.
2. The handheld terminal scans the connection barcode at the bottom of the base, and the handheld terminal will attempt to connect to the base. At the same time, the handheld terminal will make beep-beep-beep sound.
3. If the connection is successful, the handheld terminal can be used directly. If the connection is unsuccessful, the handheld terminal will make a beep—beep— sound, and the red LED on the handheld will blinks 2 times, and then turns off.
4. If you want to disconnect, you can scan the barcode as shown below.



Bluetooth mode



Scan mode



Initialization settings and information display

- | | |
|---|--|
| Some parameters of handheld unit return to default setting
default setting
%%%DEF | All parameters of handheld unit return to default setting
default setting
%%ADEF |
| Return to default setting of cradle
%%BDEF | Handheld unit firmware version display
%%%VER |
| Cradle firmware version display
%%BVER | Bluetooth version display
%%BTVER |
| Bluetooth MAC address display
%%BMAC | Bluetooth name display
%%%BTN |

Vibration indication



Beeper indication



Volume of beeper



German keyboard layout



Note: The factory default settings are indicated with asterisks ().*